


ELP-3000/3300


DATA VIDEO PROJECTOR

EPSON® Easy Setup

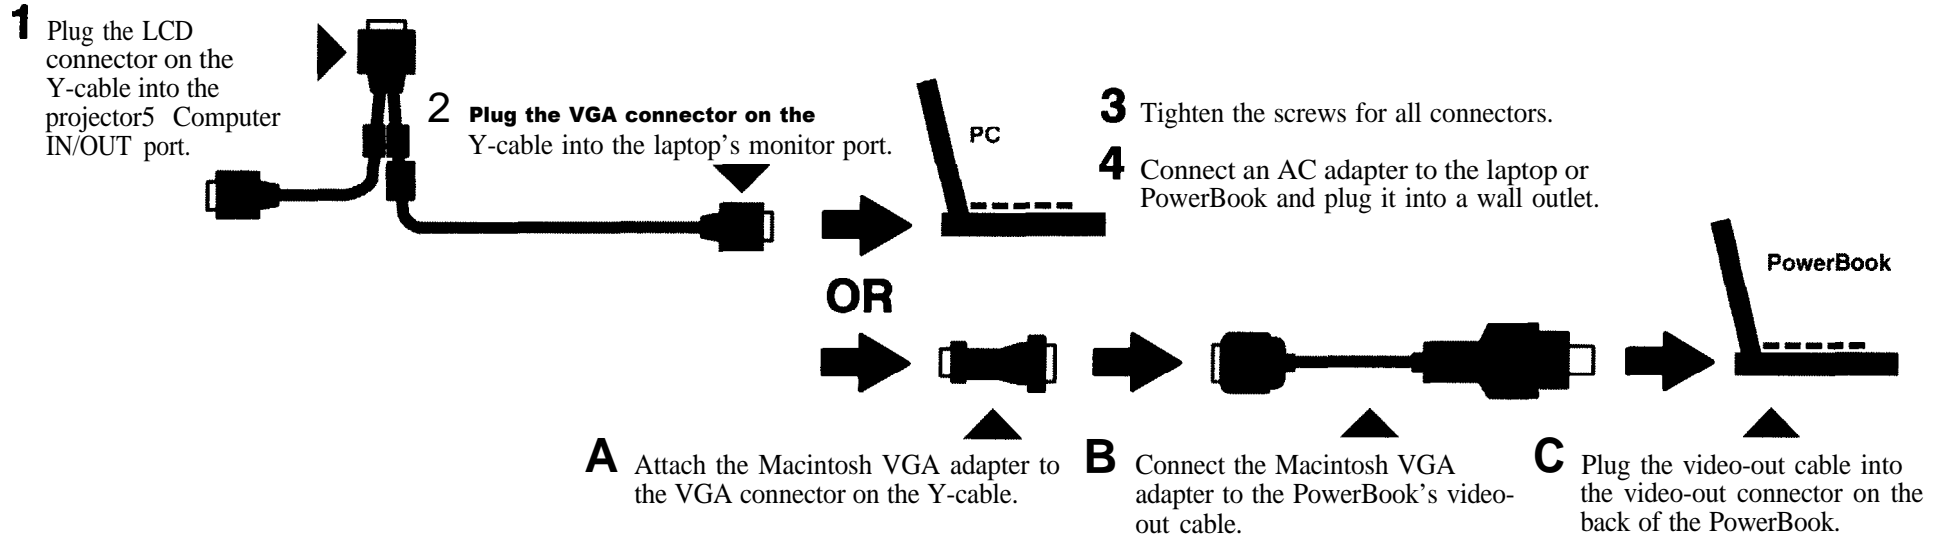

Using The Projector

- Turn on the projector and then turn on the computer.
- If you're using a PowerBook™, choose Mirroring in the Display Control Panel. If you're using a PC laptop, you may have to set the display to appear on both the computer's screen and the projector.
- Zoom in the image (make it smaller) by rotating the zoom ring.
- Adjust the focus by rotating the focus ring and zoom out to correct image size.
- If the image is too high or too low, press the purple buttons and raise or lower the projector.
- Turn the feet to further adjust the height.

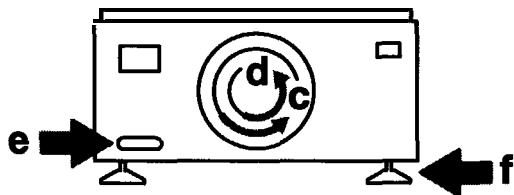

See your *Owner's Manual* if you want to control the projector from your computer or use external audio or video sources, an external speaker, or a desktop computer.

*Warning: Never look into the lens when the lamp is on.
Never lift or ho/d the projector by its lens.*

Take Along Checklist

- ☐ Computer
- ☐ Projector lens cover
- ☐ Power cord
- ☐ Y-cable
- ☐ Remote control unit
- ☐ Macintosh® adapters: VGA, monitor, and serial
- ☐ RS-232C serial cable and ELP Utilities Diskettes
- ☐ AV (audio/video) cable (for external sources)
- ☐ *Owner's Manual*
- ☐ Extra AA batteries (for the remote control unit), fuse, and lamp
- ☐ _____
- ☐ _____
- ☐ _____

If you need help or EPSON Road Service, call
1-800-922-8911.